

Welcome to the MGI R Series

Congratulations on purchasing the world's most modern and sophisticated buggy.

Getting started with your Hunter R200 is easy. Once unpacked, charge your battery overnight using the battery charger included, register your buggy online to activate warranty and you're ready to enjoy the game.

Take some time and explore the features as this guide provides tips and instructions to help you learn the basics.

For a full guide to using your Hunter R200 please read the User Guide which can be found online at www.mgi-golf.com. It contains important service, care and warranty information.

What's in the box

- Buggy
- Digital charger
- Umbrella holder
- Sand bucket loop
- Seat
- Battery
- Battery carry bag
- Battery leads

Warranty Registration

It is most important to register your purchase online at

www.mgi-golf.com

This will enable proper documentation of your warranty and will allow MGI to communicate with you on any matters relating to your buggy.

HunterR200 features

Diagram 1



Assembling your buggy

*Prior to use charge your buggy battery overnight using the digital battery charger provided

Attach wheels

There is a left wheel and a right wheel. Inside the wheel on the hub you will find "L" and "R". The left and right side is determined from behind the buggy.

To attach the wheels, place the left wheel on the left axle. Push the release button across and push the wheel on as far as it can. You will notice you need to match up the female slots of the wheel and the male of the axle. When placed in position simply release the button. You will notice you hear a "click" when the wheel is properly secured. To check that the wheel is properly in position pull on the wheel. If it is properly in position it will not move.

Diagram 2



Diagram 3



Assembling your buggy

Unfolding buggy

1. Press the red height adjusting button located halfway down the handle [Diagram 4]
2. Lift the handle gently and at the same time turn the lower release button on front wheel assembly to the left [Diagram 5]
3. Lift the main handle up completely. Both the top handle and the lower handle will click into place. Now lift the top bag support up until it clicks into place also
4. The top handle has two positions. Adjust to suit your requirements by pressing the red height adjusting button
5. Slide seat into the bracket on the right side of the buggy [Diagram 6]
6. Slide sand bucket loop into the bracket on the left side of the buggy [Diagram 7]

Diagram 4



Diagram 5



Diagram 6



Diagram 7



Using the Upper and Lower Bag Straps

How to secure the top bag strap

1. Provide a good position for the positioning of both ends of the elasticised straps
2. Stretch the longer end of the strap and secure to the extended shorter end [Diagram 9]
3. The attached strap should be connected as per the photo above

Adjusting the length of the top strap

The plastic bar on the longer length can be adjusted to ensure the bag is secured properly in place.

Diagram 8



Diagram 9



How to secure the lower bag strap

Simply by holding the central tag, pull the elasticised strap over the bottom of the golf bag.

Adjusting the Rotating Front Wheel

Each buggy is checked for straight tracking prior to leaving the factory. In the unlikely event the Hunter **R200** is not tracking straight, the front wheel can be adjusted to regain straight tracking.

1. The position of the bolts to alter the tracking are located behind the front wheel housing. To make easier adjustment rotate the wheel so the rear of the wheel is now out the front of the buggy. You will see the two nickel plated bolts that use Allen keys for adjustment
2. If the Hunter **R200** veers left, use the Allen key provided to screw the right bolt anti clockwise and/or the left bolt clockwise
3. If the Hunter **R200** veers right, screw the left bolt anti clockwise and/or the right bolt clockwise

Diagram 10



Diagram 11



Charging and connecting your battery

The Hunter R200 is designed to take either the standard SLA 21/28 amp/hr battery OR MGI's Lithium Ion 12 volt battery.

To ensure your buggy knows which battery you are using follow the steps below:

1. While holding down the left hand green button [left of the speed control], plug in the battery. When the screen comes on release the button
2. Use the same button to toggle and choose either the S [SLA battery] or L [Lithium Ion], depending on your battery choice
3. Unplug the battery. Wait 5 seconds and then reconnect
4. You are now ready to play golf
5. You do not need to repeat this operation unless you change the style of battery

To connect:

1. Place battery in tray with leads facing the front of the buggy
2. Secure the battery with the battery strap
3. Connect the battery lead to the battery tray

Diagram 12



Diagram 13



Diagram 14



Guide to using the Top Control Box

Starting and stopping the buggy and changing speed

You can either preset the buggy prior to taking off, or you can start the buggy and increase the speed to meet your requirements. The speed setting is located on the right side of the colour screen. The grey button in the centre of the handle is used to increase and decrease speed and stop and start the buggy. Simply pressing the button will either start or stop the Hunter R200 and simply turning the grey button to the right will increase the speed and anti-clockwise or to the left to lower the speed. You can move from kmh to mph simply by pressing the green toggle located right of the grey speed control and on/off knob.

Three distance modes

There are three distance measurements available with the Hunter R200. Distance A is good to measure how far you hit your driver whereas Distance B might be used to measure distance for the day's round of golf. To reset, simply press the left side green toggle for 3 seconds until the reading displays "0". Any resetting can only occur when the buggy is stopped. To move from yards to metres, simply press the right green toggle. Distance C cannot be reset and is best used to measure service intervals. Each 500kms or 6 months is the recommended for service intervals.

Diagram 15



Guide to using the Top Control Box

Controlled Distance Function [CDF]

The CDF enables the Hunter R200 to be sent a preset distance. To use this function:

1. Press and hold down the grey central speed control button for 3-4 seconds until the speed setting changes to 05 [5 yards or metres] and the letter "A" appears
2. Turn the grey central button clockwise to increase the distance or anti-clockwise to decrease the distance until the desired distance is achieved
3. Always look ahead and assess the condition of the terrain of where you want to send your buggy prior to doing so
4. Once the desired distance is reached, press the grey central button once to send the buggy off to the desired distance
5. Pressing the grey button at any time during this time and the buggy will stop and the command will be cancelled

Competition Mode

In the unlikely event the club you are playing at does not allow the use of distance devices you will need to disable the distances feature on the Hunter R200. To disable the distance recording feature, simply hold down the two green toggles [buttons] at the same time for 3 seconds [these are located on both sides of the grey speed control knob] By doing this the distance recording will be removed from the screen and replaced with the words "Comp. Mode".

Guide to using the Top Control Box

Security Pin Code

The Hunter**R200** comes equipped with the option of enabling of a security pin code. To enable:

1. Whilst holding down the left side green toggle, plug the battery in. Release the button
2. Use the left side grey on/off button to choose the first number of your pin code [0-9] Turn the grey button to the right to increase the number and to the left to decrease
3. Press the right side green toggle green button to confirm your choice
4. Repeat the process for each of the four digits
5. To change your pin, follow steps 1-4. You will be required to enter your current pin first followed by the new number you wish to change it to
6. To disable this feature, follow the procedure for number selection and select four "0's"

Battery Indication Light

Battery indication is located on the left side of the top screen. Four colour bars are highlighted with full charge. The less bars, the less battery life is available. You should always check the battery status before you play golf to ensure the four bars are there.

Guide to using the Top Control Box

USB Charging Port

In case you forgot to charge your Sureshotgps or any other device that uses a USB connection for charging, your Hunter**R200** comes equipped with a USB charging port.

Diagram 16



Simply plug the USB lead into the USB charging port, located underneath the top handle. The charging comes from the main battery and will continue so long as it is connected. Charging will cease if the battery power falls to a low level.

Diagram 17



Folding down your buggy

You may remove the battery first if you prefer to lift with the least amount of weight

1. Press the red upper release button [Diagram 18]
2. Move the top handle forward and lower the top bag support Completely [Diagram 19]
3. Press the red upper handle button and complete and fold down
4. Ensure the bag straps are out of the way and the buggy handle will click into its position at the front wheel assembly

Diagram 18



Diagram 19



Diagram 20



Diagram 21



Lifting the Buggy

Place one hand at the rear of the buggy behind the battery tray and the other hand at the front of the buggy under the front wheel assembly. Do not use the upper handle to lift your buggy.

Tips about your buggy

- Your battery is designed for 18 holes only. If you play more than 18 holes before recharging, the battery's life could be compromised
- Your buggy is equipped with a fail safe battery connection which means your buggy will only start once you increase the speed control
- The Hunter **R200** is rain resistant but should be kept as dry as possible

Servicing

- Your Hunter **R200** should be serviced after 6 months of regular use

Warranty

- Please refer to the User Guide for a detailed explanation of your buggy's warranty. This can be found at www.mgi-golf.com

Optional accessories

Sureshotgps bracket-
*suits 8850 and micro



Scorecard holder



Rain cover



Umbrella holder extender



Buggy Travel cover



Need help?
Email MGI - support@mgi-golf.com
www.mgi-golf.com

We highly recommend that you read the User Guide for all service, care and warranty information.