




Installing Wire Basket on Navigator GPS Buggy



1. On the inside of both side support arms, remove rubber grommet so that the hole is exposed



2. Note the two holes in the protective cover
3. Place the bolt in the plastic support, at the narrow end, and insert into the top hole of the protective cover. Line the bolt up to the threaded hole on the side support arm and make sure that the lug on the plastic support goes into the hole that previously had the rubber grommet in it.

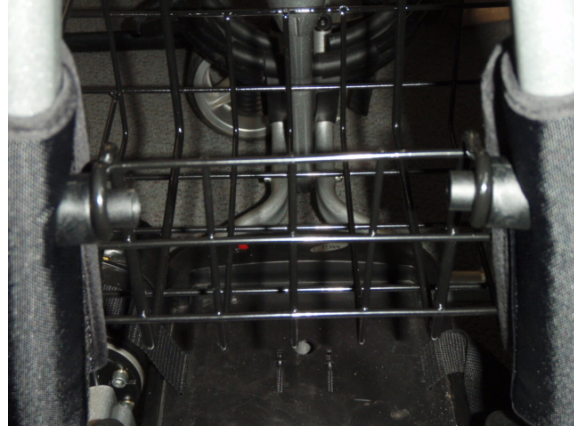

4. Repeat the installation of the plastic support on both sides.
5. Wrap the protective covers around so that the velcro is sealed together.
6. Place the wire basket in position as shown.